 

THERMOMIX® FOR KIDS

 
licensed by  VORWERK

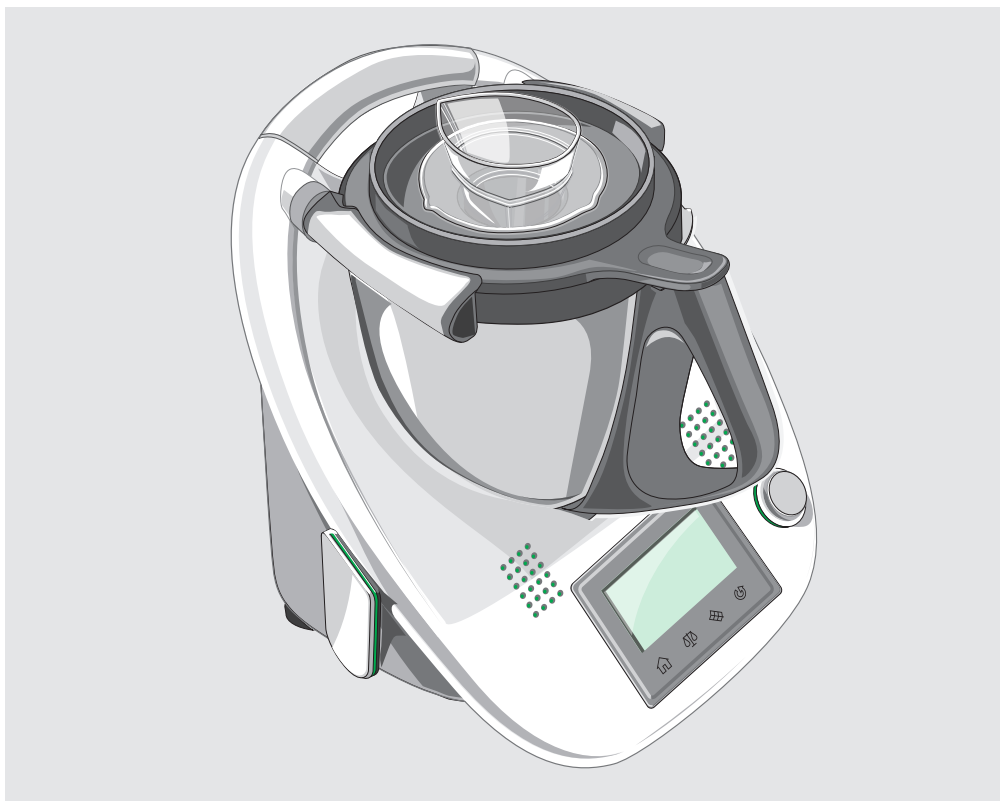

**GEBRAUCHSANLEITUNG • INSTRUCTION MANUAL • MODE D'EMPLOI •
MANUAL DE INSTRUCCIONES • LIBRETTO DI ISTRUZIONI • NÁVOD K
POUŽITÍ • INSTRUKCJA OBSŁUGI**



THERMOMIX® TM5 FOR KIDS PRODUCT OVERVIEW

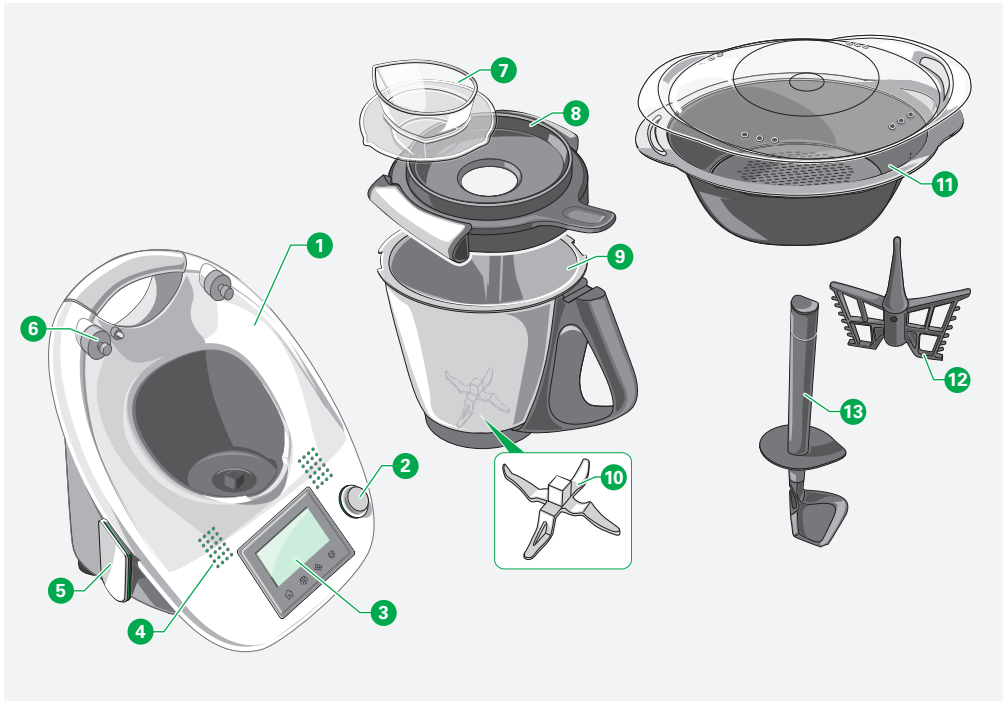

Number	Component	Number	Component
1	Thermomix® TM5 for kids base unit	8	Mixing bowl lid
2	Selector	9	Mixing bowl
3	Display	10	Removable mixing knife
4	LED display	11	Varoma (dish and lid)*
5	Cook-Key®	12	Butterfly whisk
6	Recess for mixing bowl lid	13	Spatula
7	Measuring cup		

* NOT suitable for the preparation of meals

CONTENTS

1	FOR YOUR SAFETY	4
1.1	Intended use	4
1.2	Hazard warnings	4
2	GETTING STARTED	6
2.1	Unpacking	6
2.2	Choosing the setup location	6
2.3	Assembly	6
2.3.1	Inserting the batteries	7
2.3.2	Preparing the mixing bowl for use	8
2.3.3	Attaching the Varoma	9
2.4	Switching on and off	9
3	OPERATION	10
3.1	Setting the time	10
3.2	Setting the temperature	10
3.3	Setting the speed	11
3.4	Weighing	12
3.5	Selecting the mode	13
3.5.1	Turbo mode	13
3.5.2	Dough mode	14
3.5.3	Reverse mode	14
3.6	Using the Cook-Key®	15
3.7	Overview of the Cook-Key® recipes	17
4	MAINTENANCE	19
4.1	Cleaning the Thermomix® TM5 for kids	19
5	TROUBLESHOOTING	20
6	DISPOSAL AND ENVIRONMENTAL PROTECTION	21
6.1	Disposal of the device	21
6.2	Disposal of packaging	21
6.3	Disposal of batteries	21
7	ACCESSORIES AND SERVICE	22
7.1	Accessory parts	22
7.2	Service	22

1 FOR YOUR SAFETY

Ensuring the greatest possible safety is one of the priorities of Vorwerk products. However, the product safety of the Thermomix® TM5 for kids and its accessories can only be ensured if this instruction manual is followed.

1.1 INTENDED USE

Warning: Not suitable for children under 3 years as small parts may present a choking hazard.

Warning: To be used under the direct supervision of an adult.

Note:

These devices can be used by children aged 3 years and up and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instruction or are under direct supervision concerning the use of the respective device in a safe way.

Children under 3 years must not play with the device, as the small parts present a choking hazard. Cleaning and user maintenance must not be performed by children without supervision.

THERMOMIX® TM5 FOR KIDS

The Thermomix® TM5 for kids and its accessories are intended as a toy for children. The device is intended to enable children to make simple desserts and imitate many functions of the original in the context of play. The Thermomix® TM5 for kids may only be used with the corresponding Vorwerk accessories, otherwise there is a risk that children may injure themselves while playing.

1.2 HAZARD WARNINGS

Note:

- Read the instruction manual carefully before using the Thermomix® TM5 for kids and accessories for the first time.
- Keep the instruction manual for future use. It is an important part of the Thermomix® TM5 for kids and must be kept with it if you pass it on to someone else.
- Warning: Use under the direct supervision of adults.

Risk of damage to health

Thoroughly clean your Thermomix® TM5 for kids and its accessories before initial use.

Risk of injury

- Do not make any alterations to your Thermomix® TM5 for kids or its accessories.

- Never let your children play with the Thermomix® TM5 for kids while unsupervised.
- Avoid contact with moving parts.
- Keep hair and clothing away from the moving parts of the Thermomix® TM5 for kids.
- Do not operate the Thermomix® TM5 for kids in the event of device malfunction or if the Thermomix® TM5 for kids should be dropped or damaged in any way. Send your Thermomix® TM5 for kids to the nearest authorised customer service centre for inspection, repair or electrical/mechanical adjustment.

Risk of damage

- Remove empty batteries from the device.
- Never use different battery types or new and old batteries simultaneously.
- Insert the batteries with correct polarity.
- Remove rechargeable batteries from the toy prior to charging. Non-rechargeable batteries must not be charged.
- Ensure that the hole in the lid of the mixing bowl remains free of the product that is added to the mixing bowl.
- Remove the mixing bowl with care to prevent the contents from spilling or spraying out and thereby causing damage to other objects.
- Place the Thermomix® TM5 for kids on a clean, solid and level surface to prevent the device from slipping and causing damage to other objects.
- If liquid should leak out or into the base unit of the Thermomix® TM5 for kids, do not perform any further mixing processes and clean the base unit thoroughly.
- Never place the Thermomix® TM5 for kids in the vicinity of a hot plate, an oven or in front of heaters.
- Always switch the device off before all retrofitting, cleaning and maintenance work.
- Do not immerse the Thermomix® TM5 for kids in water or other liquids. Use only a damp cloth for cleaning. Ensure that no water or dirt can penetrate into the base unit.
- Never use the device in damp environments.
- Use only accessories and spare parts from Vorwerk.
- The terminal points of the batteries must not be short-circuited.
- Rechargeable batteries may only be charged under the supervision of adults.
- Remove empty batteries from the device.
- Remove the batteries if the device is not used for an extended period.

2 GETTING STARTED

2.1 UNPACKING

1. Fully remove all items of packaging prior to the initial use of the toy.
2. In particular, remove all wires, rubber bands, labels and other mountings before allowing children to access the toy.

2.2 CHOOSING THE SETUP LOCATION

WARNING

Fire hazard

- Your Thermomix® TM5 for kids may catch fire if exposed to an external heat source. Ensure that the Thermomix® TM5 for kids is not placed on or in the vicinity of a hot surface or hot plate!

CAUTION

Risk of injury

- If the Thermomix® TM5 for kids should fall, this can cause injuries. The Thermomix® TM5 for kids must therefore be placed on a clean, solid and level surface to prevent it from slipping.

1. Place your Thermomix® TM5 for kids on a clean, stable and level surface to ensure that it cannot slip or fall.

2.3 ASSEMBLY


It is essential to assemble the device prior to play or the preparation of food.

1. Supervise your child and provide them with instructions during assembly.

i Batteries are not included in delivery. We recommend to use rechargeable batteries **1,2V AA/HR6 \geq 1600 mAh**. But you can operate the Thermomix for Kids with batteries **1,5V AA/LR6 \geq 1500 mAh** too.

2.3.1 INSERTING THE BATTERIES

1. Place the device on the table with the rear side facing downwards.
2. Open the battery compartment on the underside of the device using a Phillips-head screwdriver and insert the batteries. Ensure correct polarity of the batteries.
3. Close the battery compartment properly and place the device upright in the correct position.

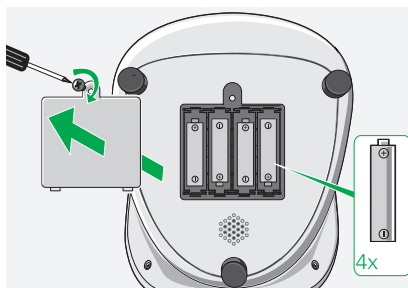


2.3.2 PREPARING THE MIXING BOWL FOR USE

CAUTION


Risk of damage to health

- Thoroughly clean your Thermomix® TM5 for kids and its accessories before initial; see Chapter “4.1 Cleaning the Thermomix® TM5 for kids” on page 19.

1. Insert the mixing knife into the mixing bowl.
2. Place the butterfly whisk securely onto the mixing knife if this needs to be used.

 The butterfly whisk is sufficiently stable to allow users to make fruit juice drinks or milkshakes.

3. Place the mixing bowl lid on the mixing bowl.
4. Rotate the mixing bowl lid clockwise until it is securely engaged in the retainer of the mixing bowl.
5. Insert the sealed mixing bowl into the base unit. The mixing bowl lid must engage in the recesses at the side, achieved by pressing down firmly.
6. When inserting the measuring cup into the hole in mixing bowl lid, always ensure that the opening of the cup faces upwards.

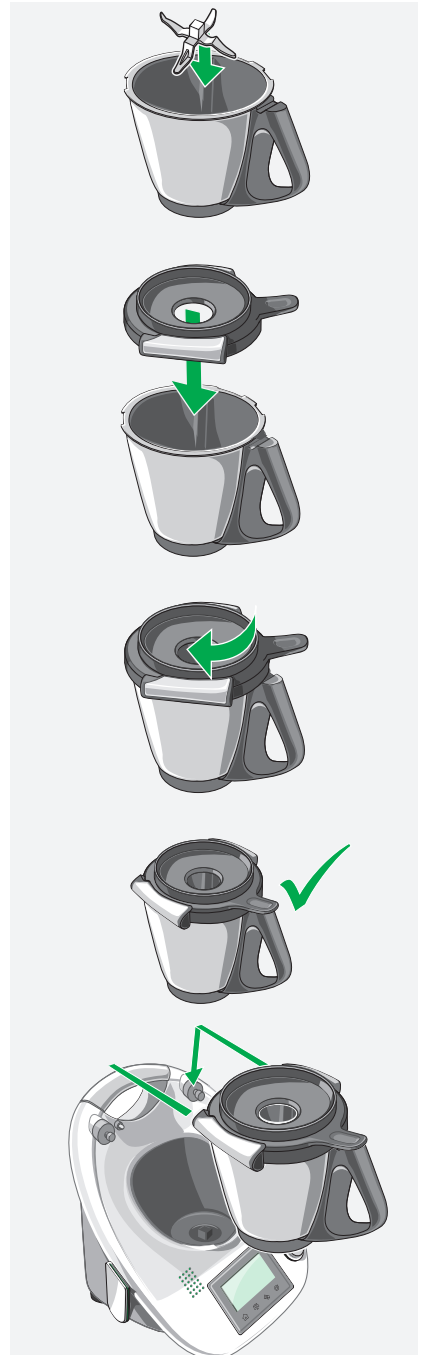

2.3.3 ATTACHING THE VAROMA




1. If you want to imitate a cooking process with the Varoma as part of play, you first need to remove the measuring cup from the mixing bowl lid and place the Varoma on the mixing bowl lid.

2.4 SWITCHING ON AND OFF


CAUTION

Risk of injury

- Never let your children play with the Thermomix® TM5 for kids while unsupervised.
- Avoid contact with moving parts.
- Keep hair and clothing away from the moving parts of the Thermomix® TM5 for kids.


1. To switch on your Thermomix® TM5 for kids, press the selector  for around 3 seconds.
The home screen appears on the display, showing the setting options.
2. To switch off the Thermomix® TM5 for kids, press the selector  for around 5 seconds.
The switch-off symbol then appears on the display.
3. To return to the home screen, press the Home key .

 


 The Thermomix® TM5 for kids switches off automatically if it is not used for around 5 minutes.


3 OPERATION


3.1 SETTING THE TIME


1. You can set the duration of a mixing process via the time symbol **1** on the home screen.
2. By turning the selector clockwise, you can change the duration up to a maximum of 2 minutes.
3. You can reduce the selected duration by turning the selector anti-clockwise.
4. Press the selector to confirm the time specification.
5. To return to the home screen, press the Home key .

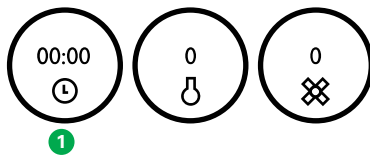

3.2 SETTING THE TEMPERATURE

 The temperature setting is only a function for play and is not a preparation function.

1. You can set the temperature of a mixing process via the temperature symbol **2** on the home screen.
2. By turning the selector clockwise, you can change the temperature up to a maximum of 120°C.
3. To select the Varoma cooking method as part of play, turn the selector further to the right after the display shows 120°C.
The Varoma dish then appears on the display.
4. You can reduce the selected temperature by turning the selector anti-clockwise.
5. Press the selector once to confirm the temperature and to access the rotation speed.
6. To return to the home screen, press the Home key .

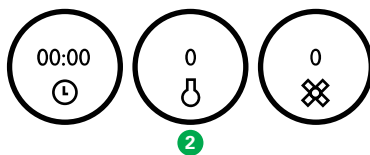

The various simulated temperature ranges are indicated by different LED colours:


- 37-60°C in green
- 65-120°C in red
- Varoma level in blue

3.3 SETTING THE SPEED

CAUTION

Risk of injury

- Never let your children play with the Thermomix® TM5 for kids unsupervised.
- Avoid contact with moving parts.
- Keep hair and clothing away from the moving parts of the Thermomix® TM5 for kids.

 The Thermomix® TM5 for kids has five actual settings for rotation speed.

 If you do not select a rotation speed, the Thermomix® TM5 for kids will automatically set the rotation speed to level 5.


1. You can set the rotation speed of the mixing knife via the speed symbol on the home screen.
2. By turning the selector clockwise, you can select a rotation speed level between 1 and 10.
3. You can reduce the selected rotation speed level by turning the selector to the anti-clockwise.
4. Press the selector again to confirm the rotation speed.

When the rotation speed is confirmed, the mixing process starts with the desired settings.

5. By pushing the selector, the operation can be paused. Time, temperature and speed can be changed. With another push on the selector the operation can be proceeded.

The mixing process starts with the changed settings.

6. To return to the home screen, press the Home key .

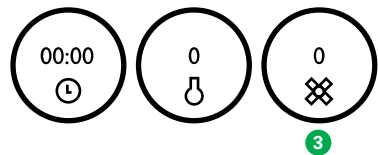


3.4 WEIGHING

i Weighing mode is a function for play. It is not possible to perform actual weighing with the Thermomix® TM5 for kids.

1. To access weighing mode, press the scales symbol .


The display will then show the weight specification – which is initially 0 g – and the mixing bowl, which is divided into six weight ranges. Each range corresponds to 100 g, resulting in a maximum weight of 600 g.

0 g

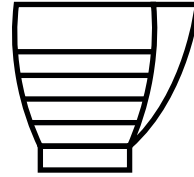


2. Turn the selector to select the desired weight.
3. Press the selector to confirm and save the weight.

The mixing bowl shown on the display is filled with the previously selected weight specification and an OK symbol appears.
4. You can exit the weighing function by selecting and pressing the OK symbol.


The previously saved weight then appears on the display.
5. You can then restart the weighing process by pressing the scales symbol  again.
6. Select the arrow head to add another weight and perform weighing.

 In the process, the mixing bowl on the display shows how much weight has already been saved.
7. By pressing the selector, you can save the new weight and add it to the previously selected weight.


The mixing bowl continues to fill up. If the maximum weight of 600 g is exceeded, the display shows an arrow head pointing upwards with a horizontal line through it. The mixing bowl shown on the display is also cleared and the weighing process must be started over from the beginning.
8. To clear the mixing bowl memory, press the scales symbol .


9. To return to the home screen, press the Home key .

3.5 SELECTING THE MODE



1. To access turbo mode or dough mode, press the mode symbol .
The choice between turbo mode and dough mode appears on the display.


3.5.1 TURBO MODE

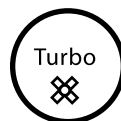1. Select the turbo mode symbol to access turbo mode.
Three time specifications appear on the display.
2. Turn the selector to select one of the three programmed time specifications.
The current selection is highlighted by means of a dotted line.
3. Press the selector to start the mixing process.
A melody is played to indicate that the mixing process is complete.
4. To return to the home screen, press the Home key .






3.5.2 DOUGH MODE

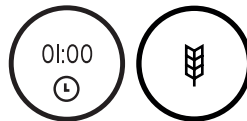1. Select the dough mode symbol to access dough mode.
A time specification and the dough symbol appear on the display. The time is automatically pre-set to 1 minute.
2. Press the selector to start the stirring process.
The LEDs light up green to indicate that the stirring of the dough is complete.
3. By pushing the selector the operation can be paused. By touching the reverse mode symbol  the direction can be changed. Another push on the selector continues the stirring process.
4. To return to the home screen, press the Home key .



3.5.3 REVERSE MODE

1. If you wish to change from clockwise mode to anti-clockwise mode, press the reverse mode symbol .
The rotation speed display changes from a knife to an arrow.
2. To exit this mode, press the reverse mode symbol  again.
3. To return to the home screen, press the Home key .

3.6 USING THE COOK-KEY®

CAUTION

Risk of injury

- Ensure that your child never cooks meals from the cookbook unsupervised.
- Avoid contact with moving parts.
- Keep hair and clothing away from the moving parts of the Thermomix® TM5 for kids.

NOTE


Risk of damage

- Ensure that the mixing bowl is always correctly inserted into the Thermomix® TM5 for kids.
- Do not exceed the maximum filling capacity of the mixing bowl.
- After a mixing process, remove the mixing bowl with care to prevent the contents from spilling.
- Only use the Thermomix® TM5 for kids with clean components.
- The sealing ring, which is located under the lid, must be checked for potential damage on a regular basis. If there is damage to or a leak in the sealing ring, the sealing ring must be replaced immediately.

You can use the Cook-Key® to access a programmed cookbook containing small recipes that you can prepare together with your child. The menu provides a step-by-step guide through the recipe with the help of icons.

1. Before you start preparing recipes, ensure that the Thermomix® TM5 for kids is correctly assembled (see Chapter “2.3 Assembly” on page 6) and that the mixing bowl (including the mixing bowl lid) is positioned correctly in the base unit.
2. To access the programmed cookbook, press the Cook-Key® **2**.
3. Turn the selector **1** to choose between the specified recipes.
4. Confirm your choice of recipe by pressing the selector **1**.








5. Press the selector **1** to confirm the individual work steps specified on the display of the Thermomix® TM5 for kids.
6. Start the preparation process by pressing the selector after adding the final ingredient to the mixing bowl.
Programmed settings for the time, temperature and rotation speed then appear on the display.
7. To pause the preparation process and to resume this process at a later point, briefly press the selector **1** each time.
8. To cancel the preparation process and return to the recipe selection, briefly press the Cook-Key® **2**.
9. To return to the home screen, press the Home key .
10. To completely cancel the cooking process, press the selector **1** for approx. 3 seconds.
This will switch off the Thermomix® TM5 for kids.







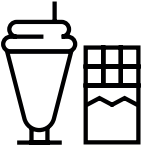


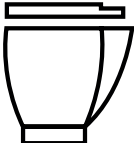
It is not possible to set your own time or rotation speed for the recipes that are programmed in the cookbook.




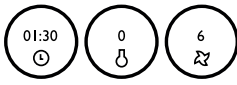
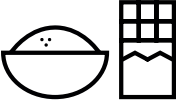
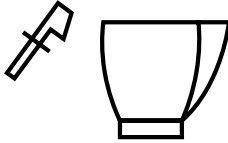

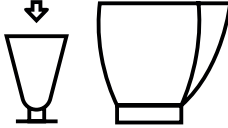








3.7 OVERVIEW OF THE COOK-KEY® RECIPES

See below for an overview of the recipes that you can prepare together with your child:

Display	Recipe	Display	Recipe
	Banana milkshake		Strawberry yoghurt
	Chocolate milkshake		Muffins Preparation instructions: After preparation in the Thermomix® TM5 for kids, it is necessary to bake the muffin mixture in an oven.
	Drinking chocolate Preparation instructions: After preparation in the Thermomix® TM5 for kids, it is necessary to heat up the drinking chocolate in a microwave.		

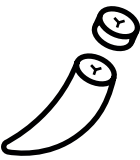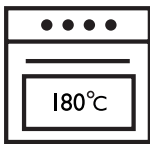See below for an overview of the symbols used and their meaning:

Symbol	Meaning	Symbol	Meaning
	Indicated quantity teaspoon		Baking powder
	Cup with 200 ml	 	Insert butterfly whisk
	Milk	 	Insert measuring cup into hole in mixing bowl lid

Symbol	Meaning	Symbol	Meaning
	Oil		Add ingredient to Thermomix® TM5 for kids; ingredient will be shown in next step
	Sugar		Pre-programmed settings on the Thermomix® TM5 for kids. No changes may be made.
	Cocoa powder		Remove with spatula
	Flour		Pour the contents from the Thermomix® TM5 for kids into the corresponding container In this context: e.g. glass for milkshake
	Egg		Garnish meal and serve In this context: e.g. strawberry yoghurt
	Chopped banana		Preheat oven as directed
	Chopped strawberry, indicated quantity 3 pieces.		Complete preparation; in this context: bake for specified period
	Cup of natural yoghurt		Complete preparation; in this context: microwave for specified period

4 MAINTENANCE

Maintain your Thermomix® TM5 for kids regularly so it can deliver maximum performance at all times.

Device/ accessories	Step	Time/frequency
Base unit	Clean the base unit	If dirty
	Replace the batteries	If battery is completely empty In case of extended inactivity
	Replace the base unit	In case of defects in base unit
Mixing bowl	Clean the mixing bowl	If dirty
	Change the mixing bowl	In case of wear
Mixing knife	Clean the mixing knife	If dirty
	Change the mixing knife	In case of wear
Mixing bowl lid	Change the sealing ring	As required/in case of defects in sealing ring
	Clean the mixing bowl lid	If dirty
Butterfly whisk	Clean the stirring attachment	If dirty
Varoma	Clean the Varoma	If dirty
Spatula	Clean the spatula	If dirty

4.1 CLEANING THE THERMOMIX® TM5 FOR KIDS

NOTE

Risk of damage

- Never use water when cleaning your base unit, as this can damage the Thermomix® TM5 for kids and thus void your entitlement to warranty.
- Never use sharp or pointed objects when cleaning the Thermomix® TM5 for kids. This can damage functional parts or impair device safety.
- Never clean the components in a dishwasher.

1. Disassemble all components, such as the mixing bowl lid, mixing knife and butterfly whisk before cleaning them, by following the steps described in Chapter “2.3 Assembly” on page 6 in reverse order.
2. Always thoroughly clean the components of the Thermomix® TM5 for kids before and after the preparation of meals.
3. When cleaning the individual parts, use a soft cloth, warm water and commercially available cleaning agent.
4. Only clean the base unit by carefully wiping it with a damp cloth. In particular, ensure that no liquid is able to enter the interior of the device.

5 TROUBLESHOOTING

WARNING

Risk of injury

- Never perform repairs on your device yourself. Repairs to electrical or electronic devices may only be carried out by your authorised Vorwerk Customer Service Centre.
- Check the device and its accessories, including all individual parts, for potential damage on a regular basis. Stop using the device if it is damaged.
- In case of damage, contact your Vorwerk Customer Service Centre.
- If water should enter the Thermomix® TM5 for kids, ensure that the Thermomix® TM5 for kids has fully dried out before using again.
- Do not operate the Thermomix® TM5 for kids in the event of device malfunction or if the device should be dropped or damaged in any way.

If your device is not working properly, it may be due to one of the following causes:

Fault	Remedy
The device cannot be switched on.	Check whether the batteries are empty and whether they have been inserted into the Thermomix® TM5 for kids with the correct polarity.
The device comes to a stop during operation.	Check whether the mixing bowl is correctly inserted into the base unit and whether the arms of the lid are positioned on the corresponding mounting of the base unit. In addition, check whether the mixing knife and butterfly whisk (if applicable) are correctly mounted in the mixing bowl.
The motor fails to run.	Check whether the lid of the mixing bowl is properly sealed and correctly inserted into the base unit.
There are interruptions to the function, the view on the LCD display and the LED lamps, the melody/tones is/are too quiet, etc.	Replace batteries with new ones.
The liquid that has been added wells up between the mixing bowl lid and the mixing bowl.	Note the maximum filling capacity. Check whether the sealing ring is correctly positioned and dry this before sealing the lid again.
The motor makes a rattling noise.	Check whether the mixing knife and butterfly whisk are securely positioned.
The temperature cannot be changed.	Press the selector before setting the temperature again.

Fault	Remedy
Pressing the mode symbol does not have any effect.	Check whether the mixing bowl lid is closed.
The motor does not start the mixing process.	Replace old batteries with new ones.
Turbo mode and dough mode do not start the mixing process.	Replace old batteries with new ones.

6 DISPOSAL AND ENVIRONMENTAL PROTECTION

6.1 DISPOSAL OF THE DEVICE



The law states that as owner of an old electrical or electronic device you are not allowed (under DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on Waste Electric and Electronic Equipment, and the reformed German Electrical and Electronic Equipment Act (ElektroG) of 20 October 2015) to dispose of this device or its electrical/electronic accessories via unsorted

domestic waste.

- Instead, please use the free collection centres intended for this purpose.
- Contact your local council for information.

6.2 DISPOSAL OF PACKAGING

The packaging is an important part of our product: it protects our devices from damage during transportation and reduces the risk of a device fault. For this reason, we cannot avoid using packaging. If you need to return or send in your device to the service or customer service department either during or after the warranty period, the original packaging provides the best protection against damages in transit.

If you nevertheless wish to dispose of the packaging, you can do this at any time and without limitation via your local council facilities (waste paper skip, yellow skip, recycling depot, waste paper collection etc.).

6.3 DISPOSAL OF BATTERIES

Used batteries should not be disposed of in domestic waste. These should only be disposed of via the municipal collection points or special waste facilities provided for this purpose in your country.

- Only dispose of drained batteries.

7 ACCESSORIES AND SERVICE

7.1 ACCESSORY PARTS

TMK 01 Varoma lid	TMK 02 Varoma dish	Mixing bowl lid TMK 03	Mixing Bowl TMK 04
			
Spatula TMK 05	Butterfly Whisk TMK 06	Measuring Cup TMK 07	Mixing Knife TMK 08
			

7.2 SERVICE

If the Thermomix® TM5 for kids isn't working perfectly or if some parts are missing from the pack, please use:

@ info@thermomix.co.uk

☎ Contact number: 0330 660 0834

Describe your problem in the e-mail and someone will get back to you immediately.

Please keep the instructions, proof of purchase and warranty card in a safe place during the warranty period.

WARRANTY CARD 24 MONTHS

Name of customer: _____

Street: _____

Post code: _____

City: _____

Country: _____

Telephone: _____

E-mail: _____

Date of purchase: _____

The statutory warranty duration within the European Union is 24 months. The warranty begins as of the date of purchase or invoice. The warranty only covers production and material defects. Damage caused by improper handling or use (see CAUTION & CLEANING), excessive force, force majeure, manipulation, personal attempts at repair or normal wear is not covered by this warranty. The Thermomix® TM5 for kids is made from high-quality materials and components. The manufacturer or dealer assumes no responsibility or liability for personal injury that occurs in the context of using the device and that can be traced back to improper repairs or structural changes (such as the mounting of parts from other manufacturers or of improper components, etc.). The risk of use is borne by the user alone.